# ASSEMBLY INSTRUCTION

***MODEL NO: B6600-9***
***B6610-9***
***B6630-9***
***FOR TV STAND***

**BOX OF TV STAND**
**PART LIST**

| ITEM | DRAWING | DESCRIPTION | QTY |
|---|---|---|---|
| A | 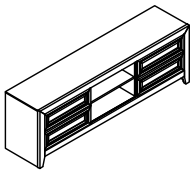 | TV STAND | 1 |

**BOX OF TV STAND**
**HARDWARE LIST**

| ITEM | DRAWING | DESCRIPTION | QTY |
|---|---|---|---|
| 1 | | ANTI TIP-KIT | 1 |

## Step 1

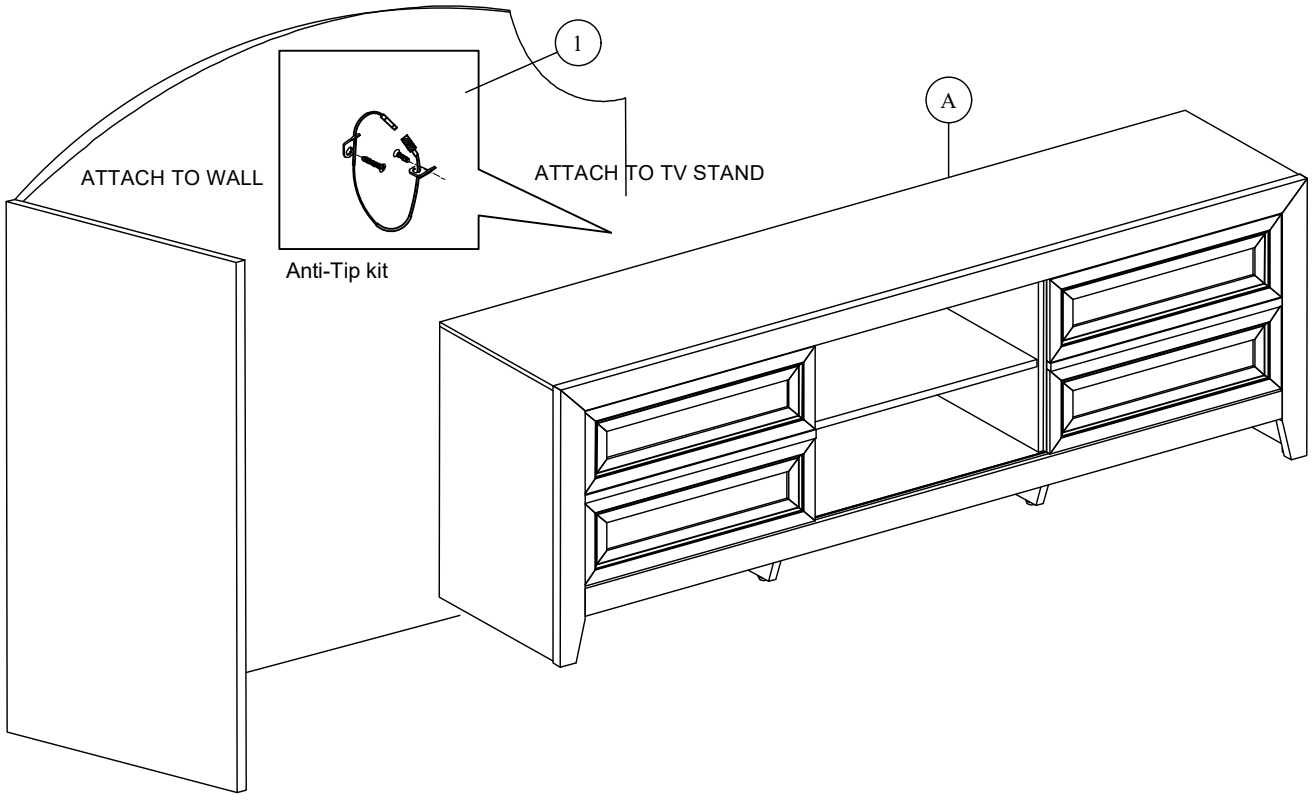


**THE ANTI TIPPING HARDWARE IS LOCATED AT THE BACK OF TV STAND**

NOTE : PERIODLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC.) ARE TIGHT.

**CLEANING INSTRUCTION**
After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

**MADE IN MALAYSIA**

# Step 2

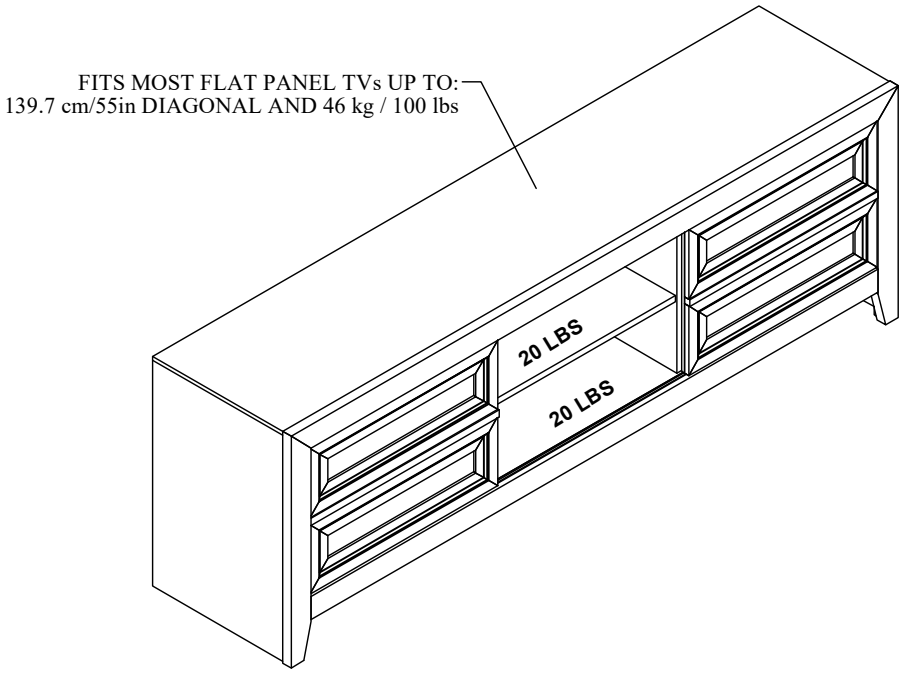

a) "WARNING - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child".

b) "WARNING - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child".

**THE ANTI TIPPING HARDWARE IS LOCATED AT THE BACK OF TV STAND**

NOTE : PERIODLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC.) ARE TIGHT.

**CLEANING INSTRUCTION**
After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

**MADE IN MALAYSIA**