

ASSEMBLY INSTRUCTION

CROWNMARK
MODEL : B4510-1/B4510-11
DRESSER & MIRROR

(Box 1)
 BOX OF MIRROR

NO	ITEM	Qty
A	MIRROR	1 PC
B	MIRROR SUPPORT	2PCS


(Box. 2)
 BOX OF DRESSER

NO	ITEM	Qty
C	DRESSER	1 PC


(Box. 1)
 HARDWARE LIST

NO	ITEM	Qty
1	Flat Head Chipboard Screw m4x32mm Rbw	8 PCS



STEP 1: Remove mirror support (B) from carton
 THE HARDWARE IS LOCATED IN THE PACKING ITEM

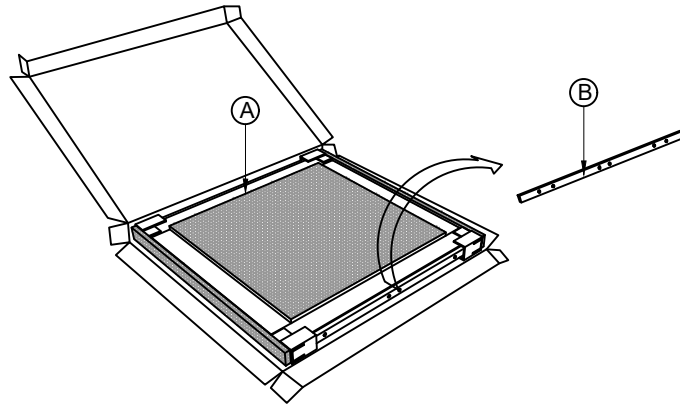

STEP 2: Align mirror support (B) by follow the line marking provided. Then fasten with Csk screw (1) securing them by using screw driver (NOT PROVIDED).

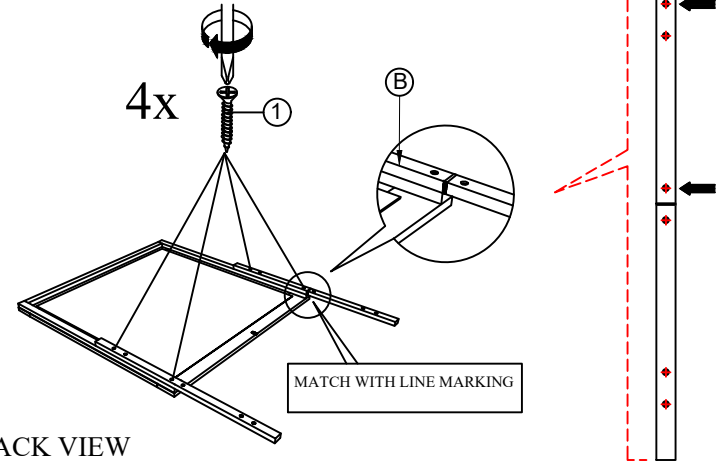

STEP 3: Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using Csk Screw (1) with Srew with screw driver.(NOT PROVIDED)
 Note : Make sure marking mirror must align with the dresser marking as shown.

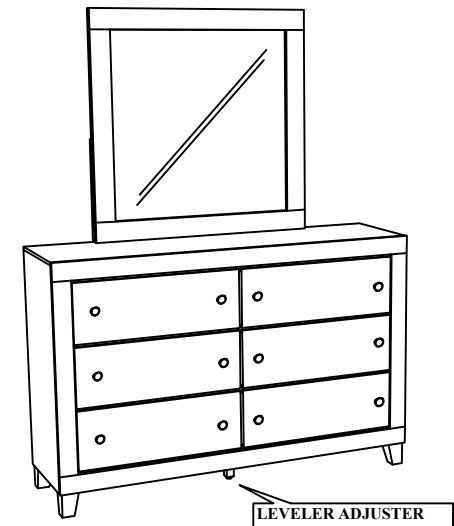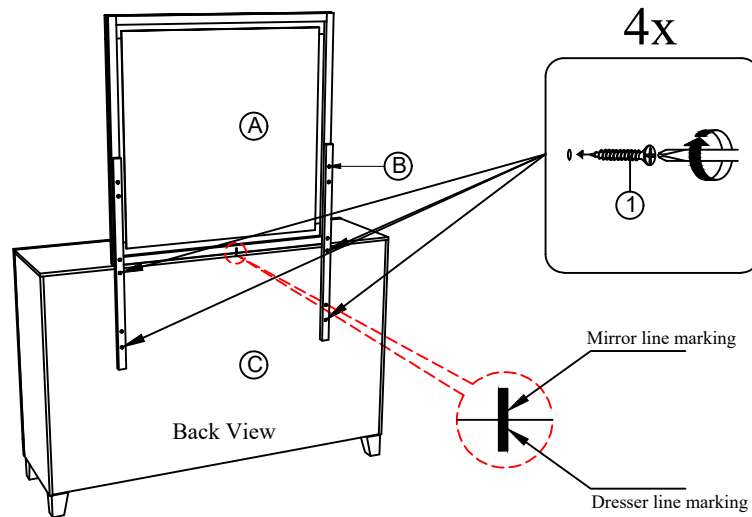

COMPLETED ASSEMBLY

NOTE : Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.