





ASSEMBLY INSTRUCTIONS

**CROWNMARK
MODEL : B4510-2
NIGHT STAND**

**(BOX 1)
BOX OF NIGHT STAND**



NO	ITEM	QTY
A	NIGHT STAND 	1 pc
B	BUN FOOT 	4 pcs

**(BOX 1)
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC Bolt m6x50mm Blk 	4 pcs
2	Allen Key m4x110mm With Ball Blk 	1 pc

STEP 1 : Pull the bottom drawer and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1) and securing with Allen Key (2) as shown.

THE HARDWARE IS LOCATED IN THE PACKING ITEM
THE ANTI- TIPPING HARDWARE IS LOCATED IN THE TOP
DRAWER.

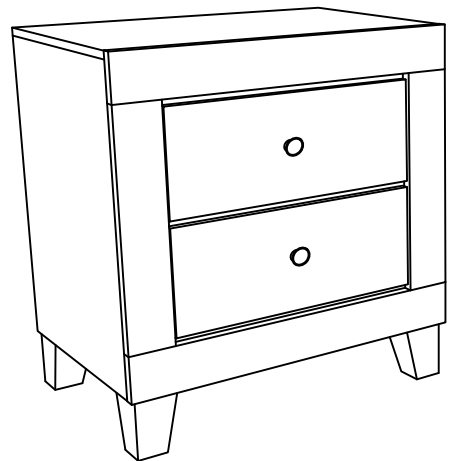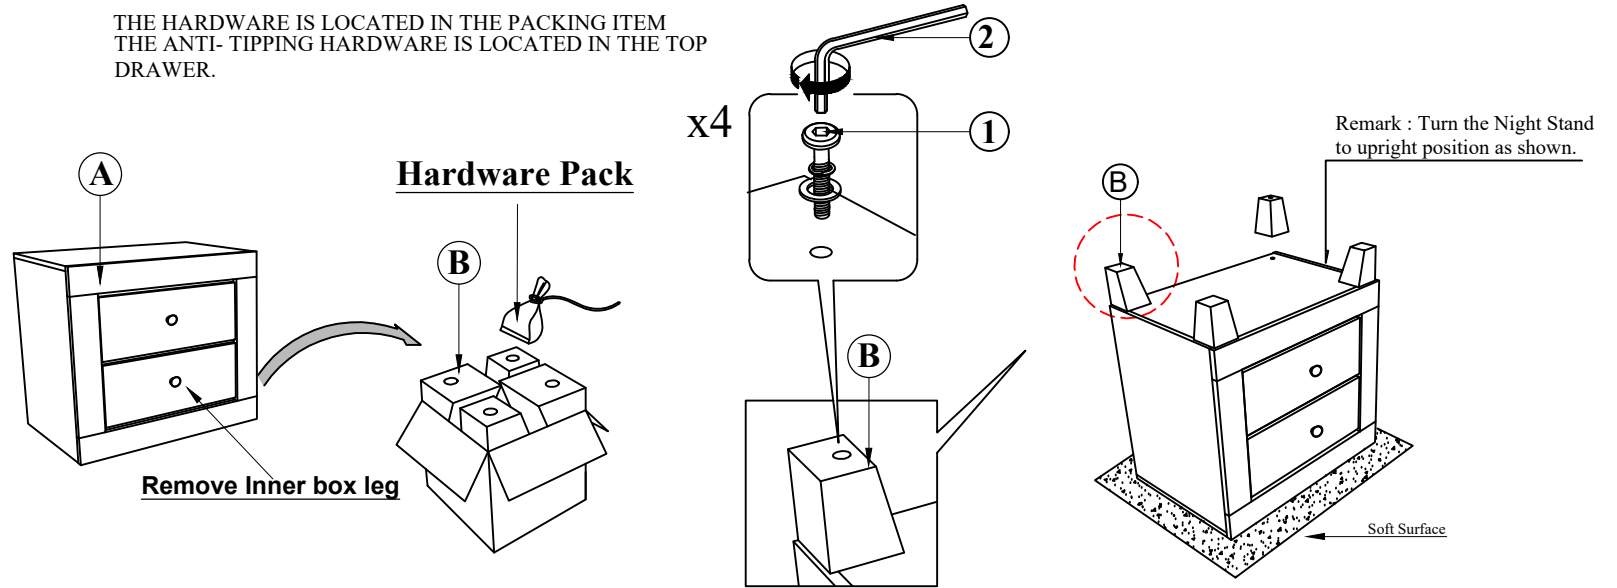

COMPLETED ASSEMBLY

NOTE : Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.