




ASSEMBLY INSTRUCTIONS


CROWN MARK (CRWN)



MODEL: B6520-1 DRESSER & B6520-11 DRESSER TOP

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH HARDWARE LIST AS BELOW:


(BOX 1) BOX OF DRESSER			
ITEM	DRAWING	DESCRIPTION	QTY
A		DRESSER	1

(BOX 2) BOX OF MIRROR			
ITEM	DRAWING	DESCRIPTION	QTY
B		MIRROR	1
C		MIRROR SUPPORT (L&R)	2


(BOX 1) BOX OF DRESSER (HARDWARE LIST)			
ITEM	DRAWING	DESCRIPTION	QTY
D		ANTI TIPPING RESTRAINT (Located in Dresser 1st RSF Drawer)	1

(BOX 2) BOX OF MIRROR (HARDWARE LIST)				
ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
E		ALLEN KEY M4	M4x55MM	1
F		CONNECTION BOLT (M6x35mm) W/SPRING WASHER & WASHER MEDIUM		8



STEP 1 : ATTACH AND TIGHTEN THE MIRROR SUPPORT (C) TO THE DRESSER (A) AND MIRROR FRAME (B) AT BACK, INSERT CONNECTION BOLT (F) WITH WASHER AS SHOWN.

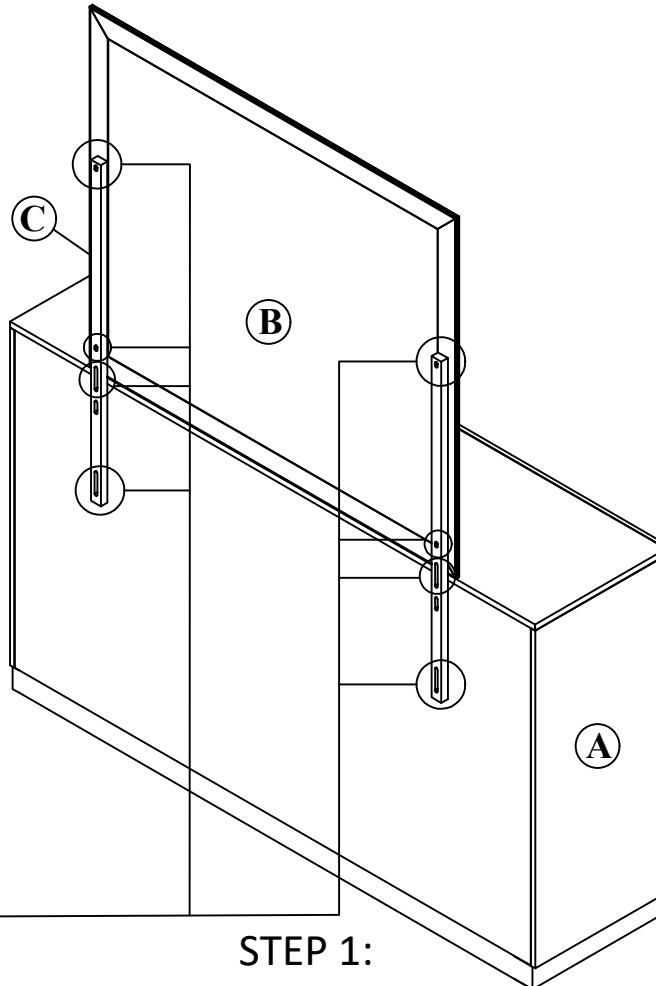

STEP 1:

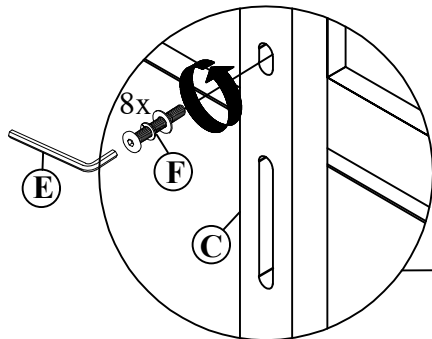

STEP 2 : Move the Dresser Top (A) & Mirror (B) into final position and use tipping restraint (D) attach to wall

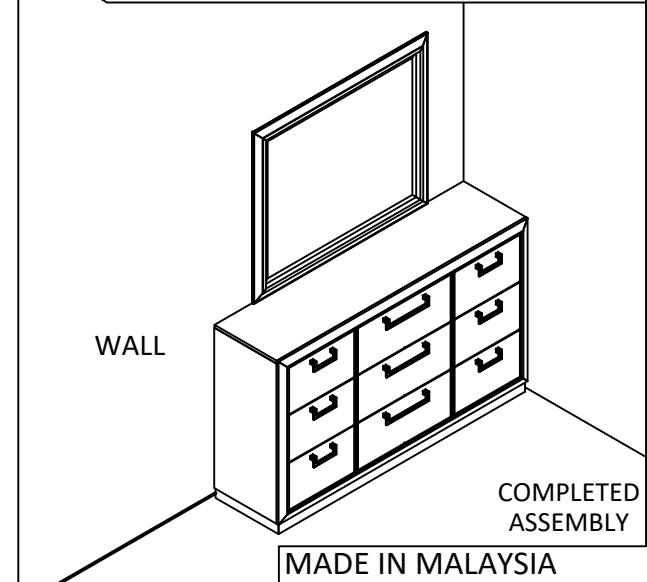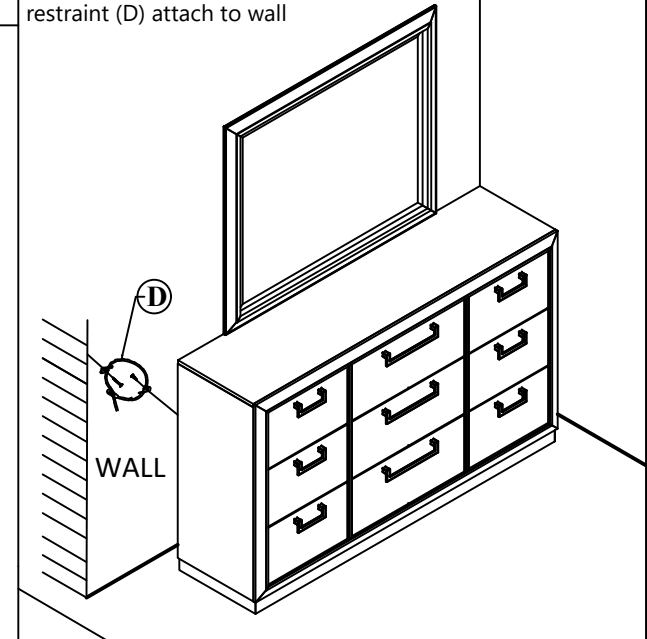

COMPLETED ASSEMBLY

NOTE: PERIODICALLY CHECK TO ENSURE THAT ALL CONNECTORS (BOLTS, SCREW, ETC) ARE TIGHT.

CLEANING INSTRUCTION
AFTER ASSEMBLED, CLEAN & POLISH THE COMPLETE PARTS IF NECESSARY WITH SOFT CLOTH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA