




ASSEMBLY INSTRUCTION

MODEL NO: B6700-1 & -11
B6710-1 & -11
DRESSER & MIRROR



(BOX OF MIRROR)


ITEM	DRAWING	DESCRIPTION	QTY
A		MIRROR	1
B		MIRROR SUPPORT	2

(BOX OF DRESSER)

ITEM	DRAWING	DESCRIPTION	QTY
C		DRESSER	1


(BOX OF MIRROR) HARDWARE LIST

1		JCBC M6 x 35mm With Spring Washer With Flat Washer	8
2		ALLEN KEY (M4)	1

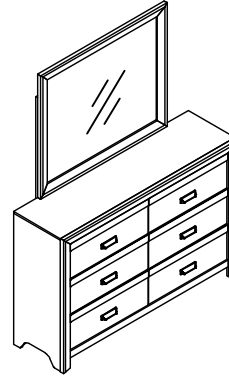

COMPLETED
DRESSER & MIRROR
ASSEMBLY

Step 1

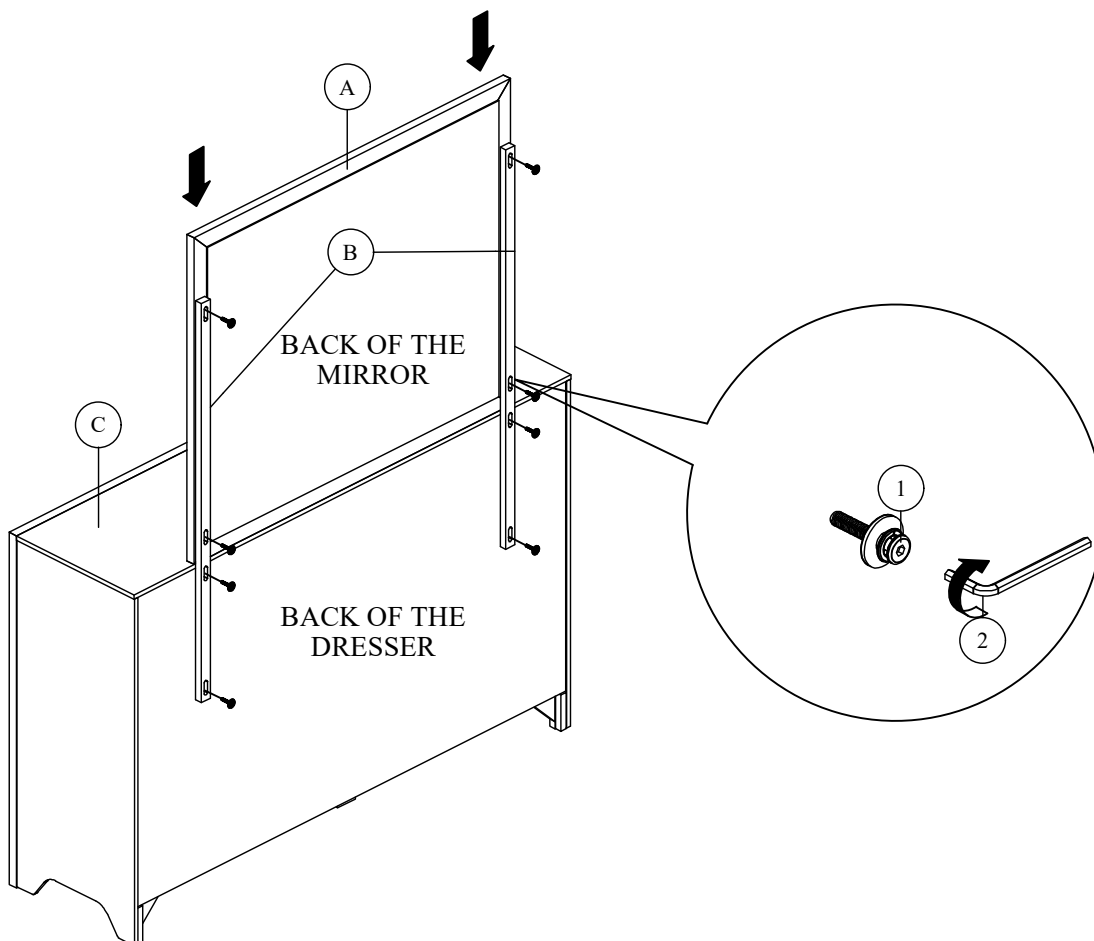

THE ANTI TIPPING HARDWARE IS LOCATED IN THE RIGHT SIDE FRONT DRAWER OF DRESSER

NOTE : Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.

CLEANING INSTRUCTION

After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

MADE IN MALAYSIA

DRESSER & MIRROR